



KITCHEN TIMER

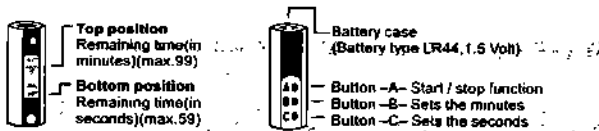

The device automatically identifies the position when turned upside down.

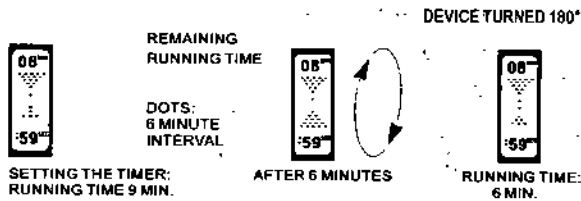

Setting the timer:

Press button -A- to stop the timer.
 Press button -B- and -C- simultaneously to delete the timer settings.
 Button -B- sets the time in minutes (max.59).
 Button -C- sets the time in seconds (max.59).
 Press button -B- or -C- while the timer is activated to display the time.
 The timer mode appears again in the LCD as soon as the pressed buttons are released.
 Pressing all three buttons simultaneously display the time; however, this deletes all timer settings.

Setting the time:

Pressing all three buttons simultaneously display the time.
 Keep button -A- pressed for 3 seconds: the hour and minute digits light up.
 Press button -B-: set the hours.
 Press button -C-: set the minutes.
 Press button -A- again: activate the time function. The time display function is activated as soon as the colon in front of the seconds display flashes.